

PARKLAND PARTY &

EQUIPMENT RENTALS LTD.

5929-48th Avenue, Red Deer, Alberta T4N 3V4

Ph: (403) 347-7733 Fax: (403) 347-7066

www.parklandrentals.com - sales@parklandrentals.com

CANDY FLOSS MACHINE

There is a \$35.00 cleaning charge that will apply to each unit that is not clean upon return.

ELECTRICAL REQUIREMENTS:

Econo Floss machine requires a 15 amp., 110 volt outlet.

HOW TO OPERATE:

- 1) Plug machine into outlet and place pan on top around head. **DO NOT USE AN EXTENSION CORD!**
- 2) Flip main power, motor and heat switch to the 'ON' position.
- 3) With motor running, fill floss head about 90% full with floss sugar.
- 4) Cotton candy will start appearing within about 45 seconds.
- 5) Cotton candy should feel dry like hair. If it is damp, turn the heat down. Also, if the machine begins to smoke, turn the heat down.
- 6) If the floss seems to be flying out of the pan, bend the leather strips on the head up.

TO MAKE A CONE:

- 1) Hold the paper cone between thumb and two fingers, and break into the floss with the cone.
- 2) Let a little floss build up on the cone and then start to rotate the cone.
- 3) Roll the cone along the pan, rotating it towards the inside of the pan.
- 4) To bag the floss, use the cone or gloved hand, put two balls of the floss into the bag.
- 5) Seal the bag keeping as much air in the bag as possible to preserve the look of the floss. Remember: 2 colors in the bag sell better than one!

CLEANING INSTRUCTIONS

Wash floss pan and wipe down the machine. **DO NOT CLEAN THE FLOSS HEAD.** Leave the left over sugar inside the machine for our experienced employees to remove.

Parkland Rentals WILL NOT ASSUME ANY LIABILITY FOR INJURY DUE TO CARELESS HANDLING OR OPERATION OF THIS EQUIPMENT.

*Should any problems arise or if you have any questions,
contact us at (403)347-7733*