

PARKLAND PARTY

&

EQUIPMENT RENTALS LTD.

5929-48th Avenue, Red Deer, Alberta T4N 3V4

Ph: (403) 347-7733 Fax: (403) 347-7066

www.parklandrentals.com - sales@parklandrentals.com

KARAOKE MACHINE

1. Plug the cord with the 'yellow' and 'red' ends into the back of the Karaoke Machine.
2. Plug the other end into the "Video In" area on the back of your TV.
3. Turn your TV on to Channel 3 or 4.
4. Plug the Karaoke Machine into the wall power outlet.
5. Plug in one or both of the microphones into the machine.
6. Choose a song from the CD list, press play and adjust the volume accordingly.
7. You are ready to sing!

PLEASE DO NOT TWIRL MICROPHONES AS IT WILL RESULT IN THE MICROPHONE NOT WORKING. THE MICROPHONE WILL BE CONSIDERED PURCHASED.

Should any problems arise or if you have any questions, contact us at (403)347-7733