

PARKLAND PARTY

&

EQUIPMENT RENTALS LTD.

5929-48th Avenue, Red Deer, Alberta T4N 3V4

Ph: (403) 347-7733 Fax: (403) 347-7066

www.parklandrentals.com - sales@parklandrentals.com

POPCORN MACHINE

NOTE: There will be a \$35.00 Cleaning Charge which will be applied for each unit that is not returned clean. All machines must be returned in the same condition in which they were received – THOROUGHLY CLEANED & READY FOR USE. Please read the following instructions to avoid any additional charges.

HOW TO OPERATE:

PLUG DIRECTLY INTO WALL PLUG IN, OR A MAXIMUM OF 25' OF EXTENSION CORD

1. Switch the kettle heat on, switch the kettle motor on, switch the heat lamp on.
2. Add Package of "ALL IN ONE POPCORN" and close lid. Do not use popcorn and oil.
3. Once the popcorn has stopped popping, rotate the handle to empty the popped popcorn from the kettle, then return the kettle back to the upright position.
4. Repeat this cycle for each additional batch of popcorn.
Subsequent batches are more flavorful than the initial batch.
5. Turn "OFF" the kettle heat switch after the last batch, when popcorn breaks over the lid of the kettle. This will eliminate smoke and odor.
6. Turn kettle motor and heat switches off. It is very important to ensure that all switches are switched OFF after use.
7. After cooling the kettle, wipe exterior with a heavy cloth.
This will prevent the remaining oil from burning.
8. When not popping, keep glass doors OPEN.
9. **DO NOT** leave kettle switch on when there is no popcorn in the kettle.
10. Motor air intake and exhaust holes at the top of the machine must be clear of any obstructions.

CARE AND CLEANING:

- Unplug kettle and ALWAYS allow the kettle to cool before cleaning or handling.
- Remove any left over popcorn from machine
- Use soapy water or other household cleaner to wipe kettle, kettle lids and crossbar clean.
- Remove "Old Maid" pan, empty unpopped kernels, then wipe clean.
- Be sure to wipe both interior and exterior of the popcorn machine.
- **IMPORTANT: DO NOT submerge the kettle in water to clean!!!**

The bottom of the kettle contains the heat element.

WARNING: DO NOT touch kettle when the machine is hot as it may cause serious injury.

Should you have any concerns or questions please call Parkland Party & Equipment @ 403-347-7733. Enjoy

